

Montageanleitung:
Paro
Winkel Glas/Wand 90°
Art.-Nr.: 70.163

Mounting instruction:
Paro
Bracket glass/wall 90°
Art.-No.: 70.163



Wichtige Informationen:

Glasstärke
8 mm

Vor der Montage Glasflächen
mit handelsüblichen Glasreiniger
im Bereich der Klemmflächen reinigen.
Keine Verdünnung verwenden.

Die gelieferten Dübel sind nicht für alle
Wandbeschaffenheiten geeignet!
Geegnete auf den Untergrund abgestimmte
Verschraubungen verwenden!


Important information:

Glass thickness
8 mm


All glass clamping areas are to
be cleaned with standard glass
cleaning products prior to installation.
Do not use thinners.

The wall plugs supplied are not suitable
for all types of walls! Please use suitable
screw connections according to foundation!


Lieferumfang:
Scope of delivery:

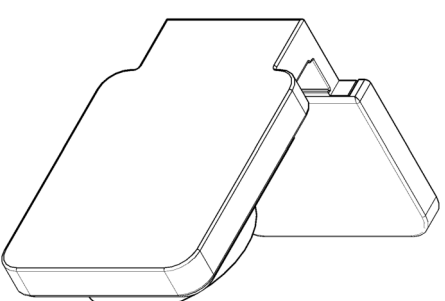


1. Vorbereitung des Winkels:
1. Preparing the wall bracket:

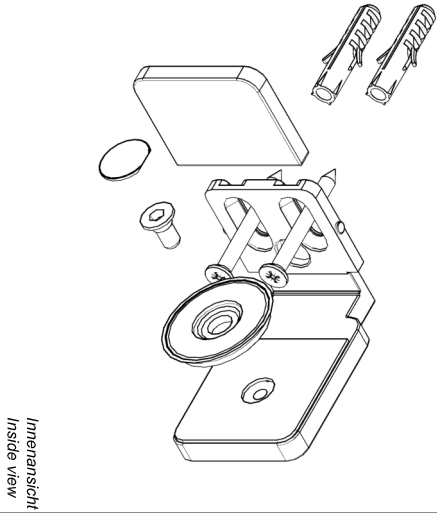


2. Montage am Fixteil:
2. Assemble on fixed panel:

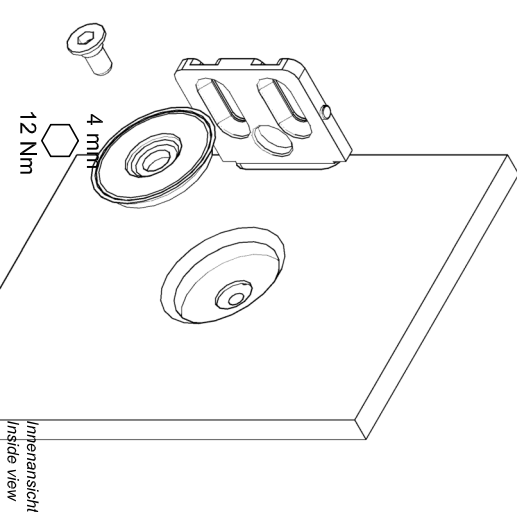

3. Montage zur Wand:
3. Assemble to the wall:

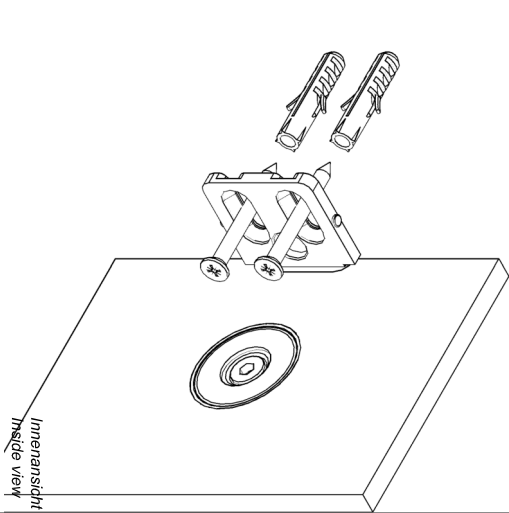


4. Abdeckkappen aufkleben:
4. Stick on the covers:

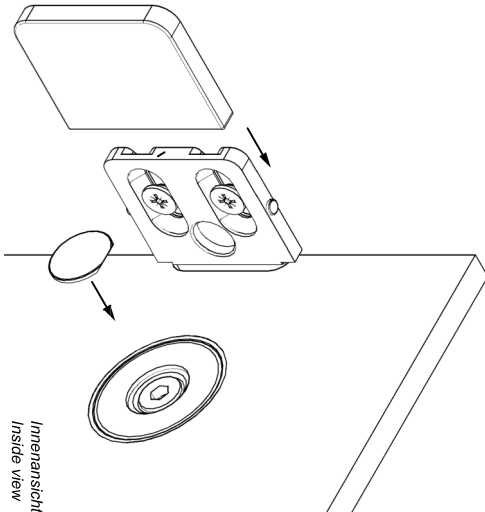

Glasbearbeitung:
Glass preparation:

Glasstärke: 8mm
Glass thickness: 8mm

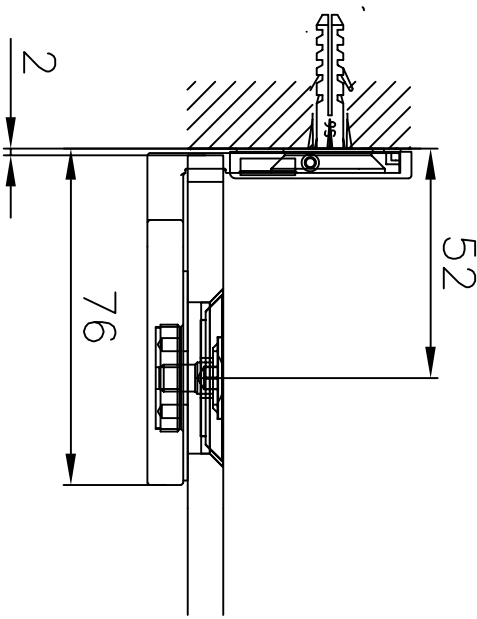

Ansicht von Innen

