

Montageanleitung:
Paro
Winkel Glas/Glas 90°
Art.-Nr.: 70.164

Mounting instruction:
Paro
Bracket glass/glass 90°
Art.-No.: 70.164



Wichtige Informationen:

Glasstärke
8 mm

Vor der Montage Glasflächen
mit handelsüblichen Glasreiniger
im Bereich der Klemmflächen reinigen.
Keine Verdünnung verwenden.

Die gelieferten Dübel sind nicht für alle
Wandbeschaffenheiten geeignet!
Geegnete auf den Untergrund abgestimmte
Verschraubungen verwenden!


Important information:

Glass thickness
8 mm


All glass clamping areas are to
be cleaned with standard glass
cleaning products prior to installation.
Do not use thinners.

The wall plugs supplied are not suitable
for all types of walls! Please use suitable
screw connections according to foundation!


Lieferumfang:
Scope of delivery:

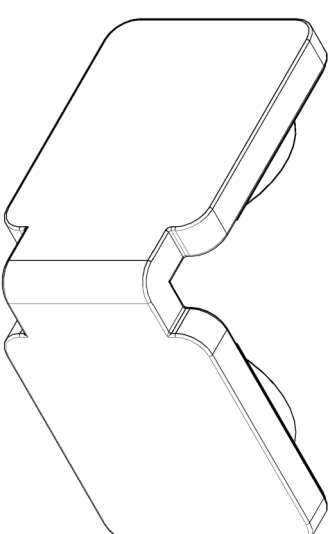


1. Vorbereitung des Winkels:
1. Preparing the wall bracket:

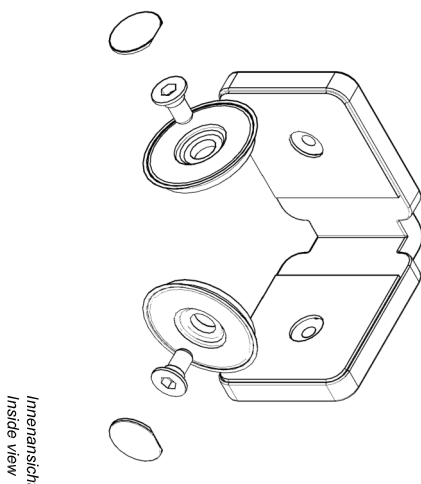


2. Montage am 1. Fixteil:
2. Assemble on 1. fixed panel:

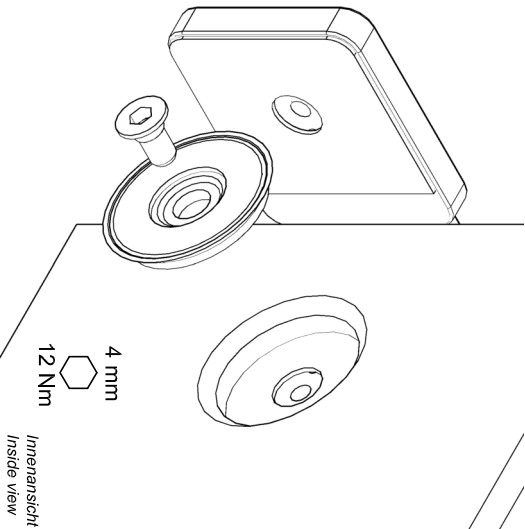

3. Montage am 2. Fixteil:
3. Assemble on 2. fixed panel:

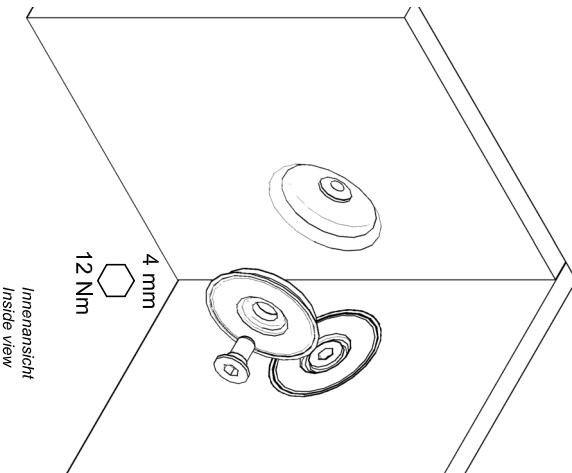

4. Abdeckkappen aufkleben:
4. Stick on cover:

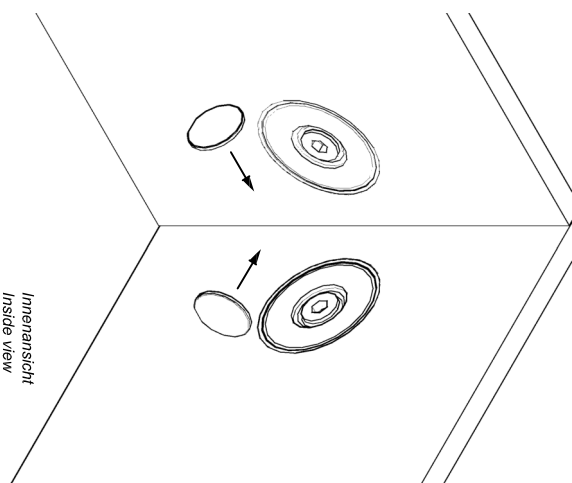

Glasbearbeitung:
Glass preparation:

Glasstärke: 8 mm
Glass thickness: 8 mm

